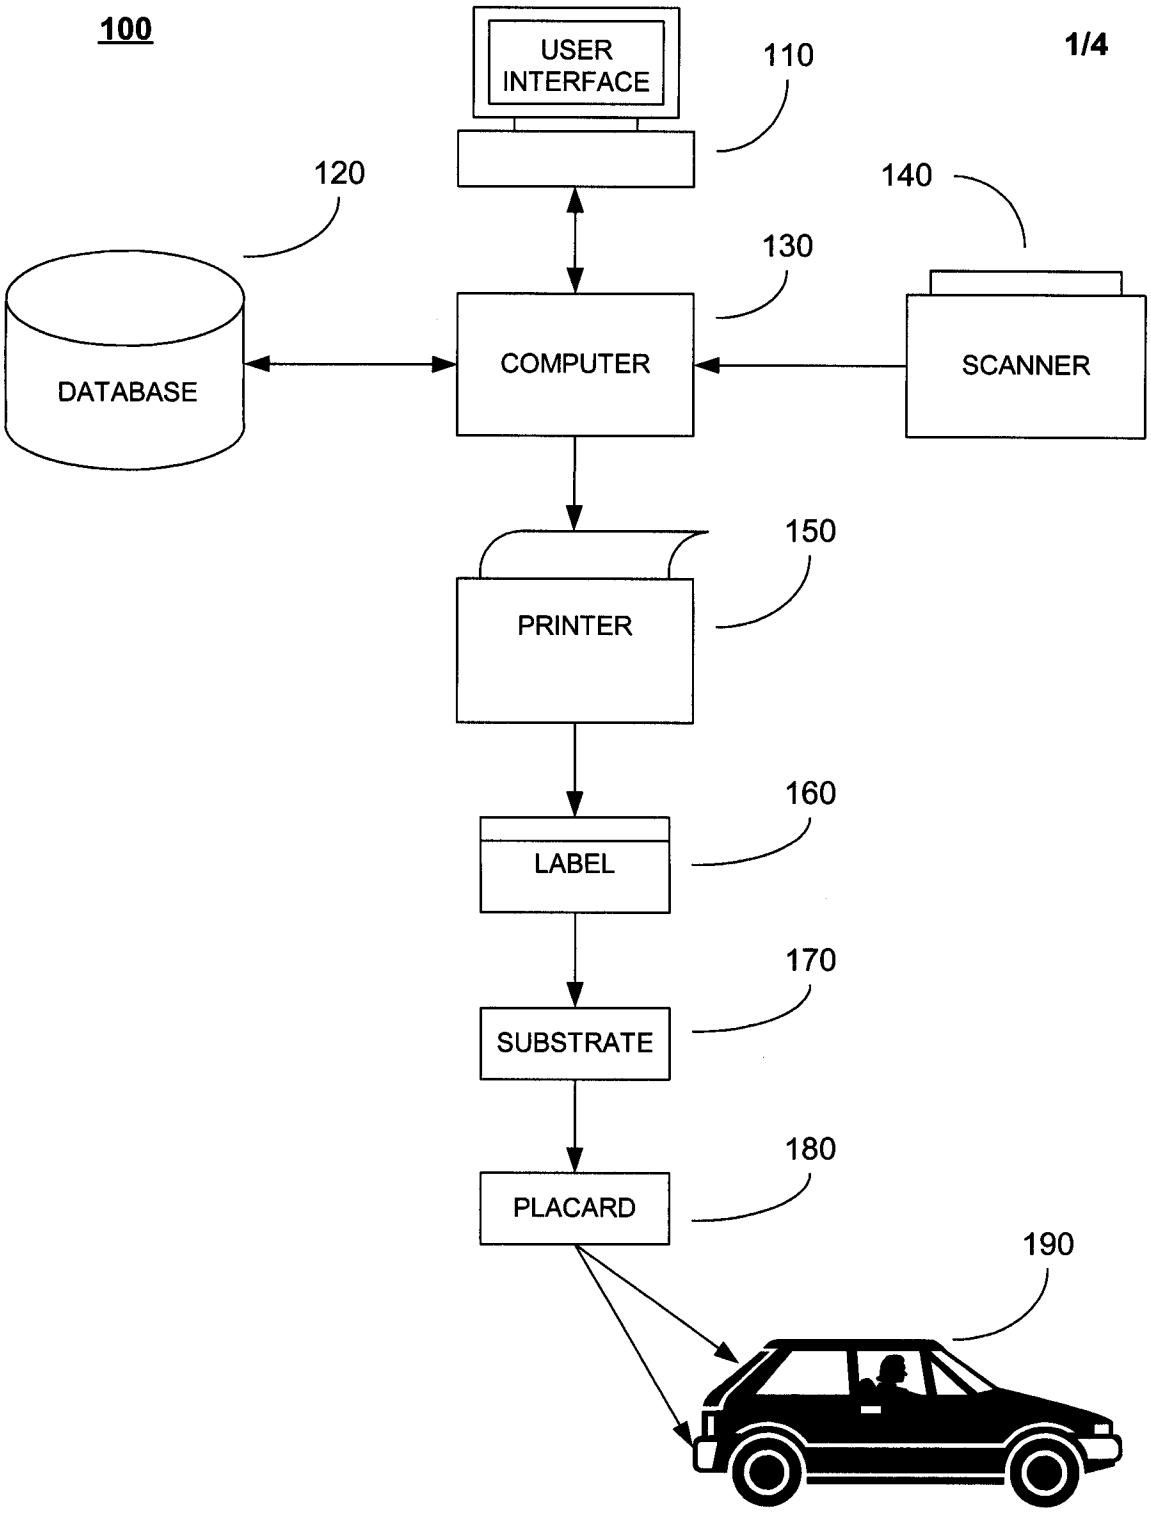
100
USER INTERFACE
110
120
140
130
DATABASE
COMPUTER
SCANNER
150
PRINTER
160
LABEL
170
SUBSTRATE
180
PLACARD
190

FIGURE 1

200

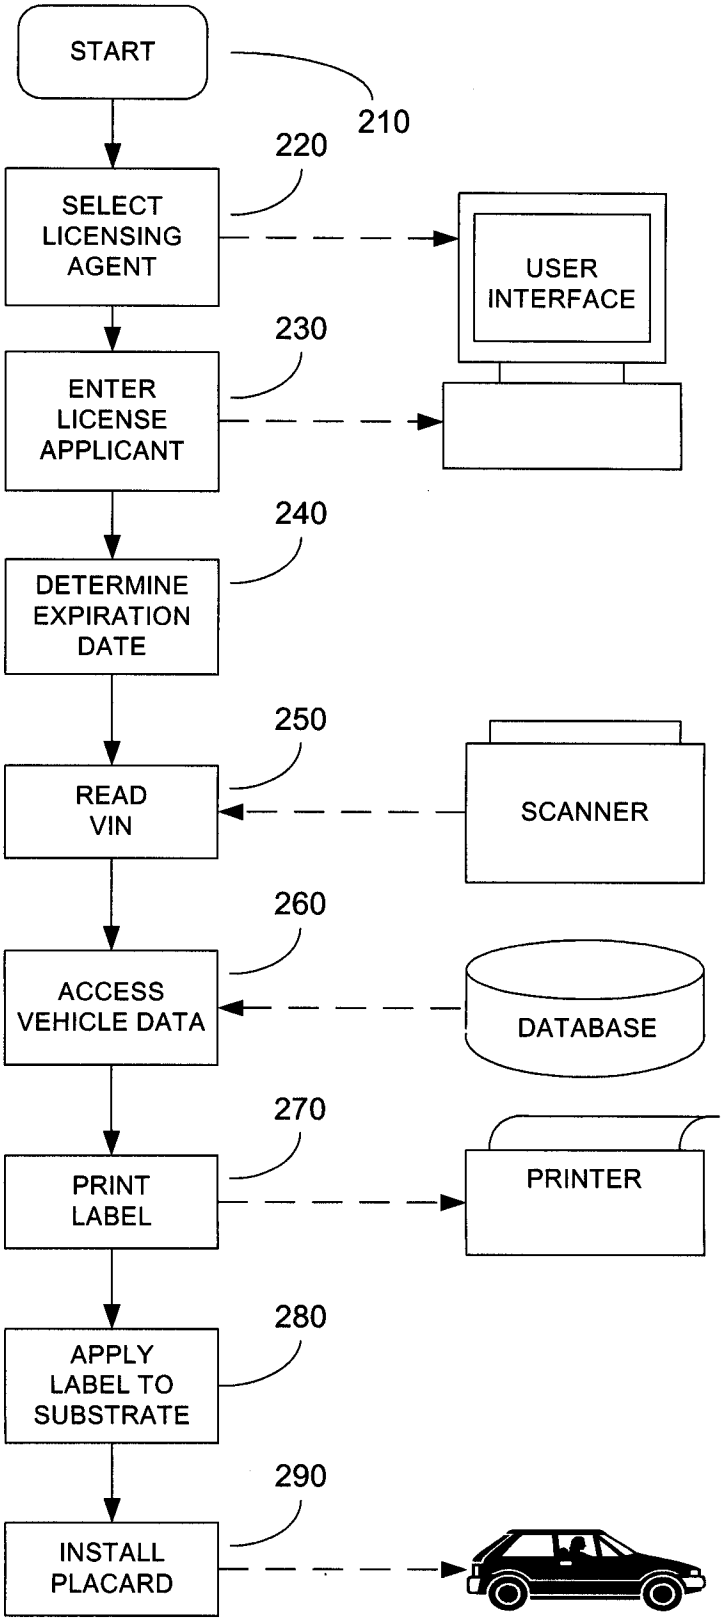
START
210
220
SELECT LICENSING AGENT
USER INTERFACE
230
ENTER LICENSE APPLICANT
240
DETERMINE EXPIRATION DATE
250
READ VIN
SCANNER
260
ACCESS VEHICLE DATA
DATABASE
270
PRINT LABEL
PRINTER
280
APPLY LABEL TO SUBSTRATE
290
INSTALL PLACARD

FIGURE 2

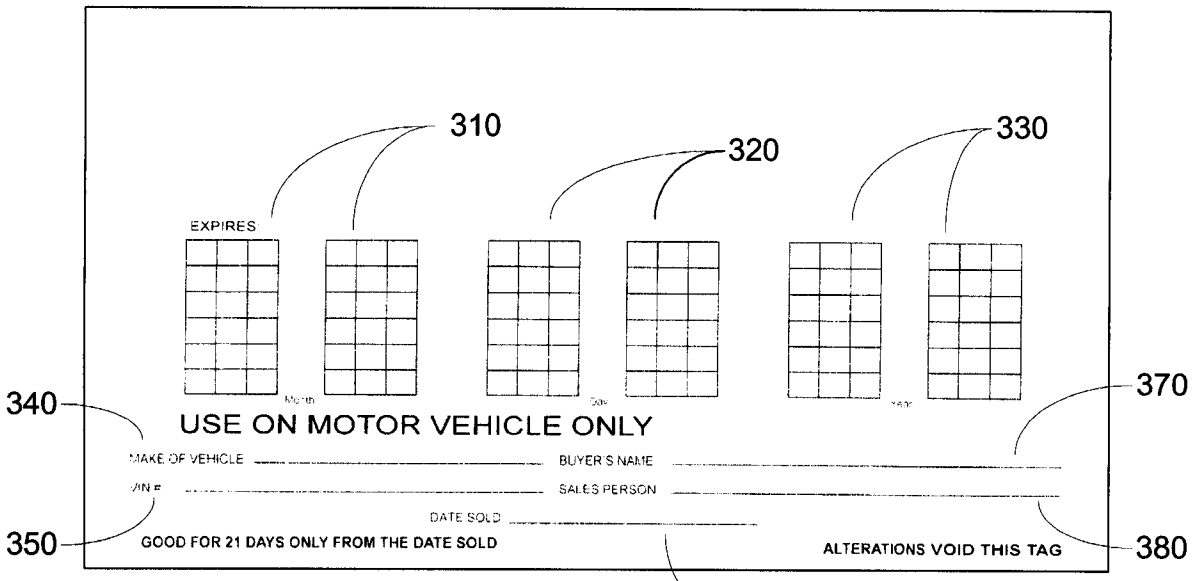

FIGURE 3

400

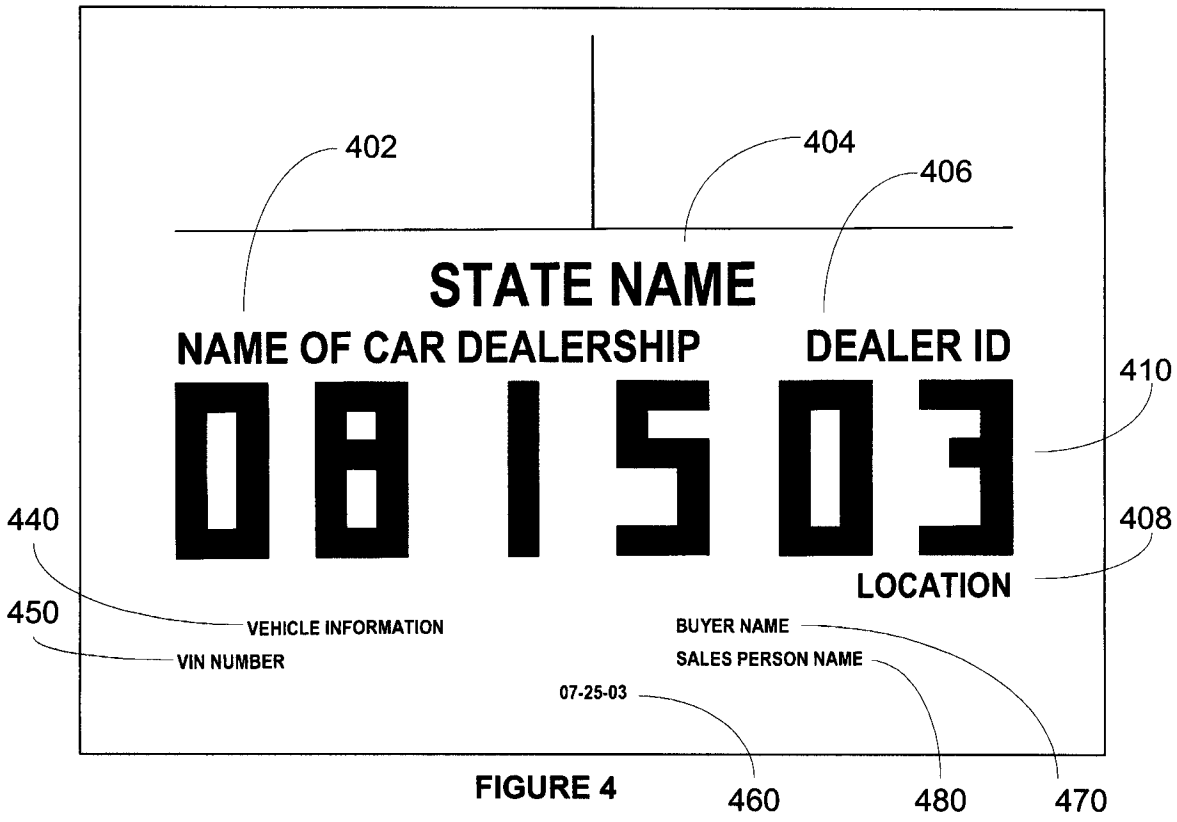

FIGURE 4

500

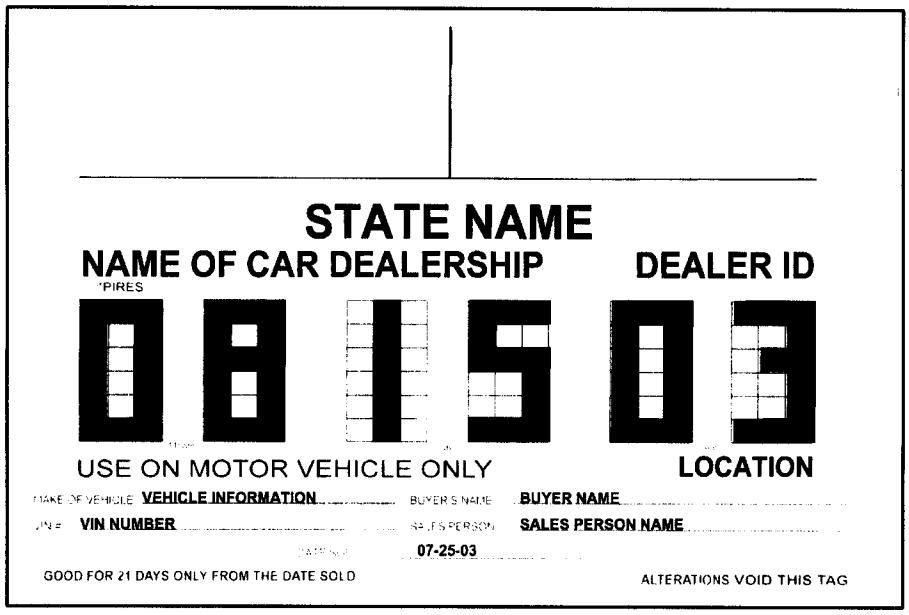

FIGURE 5A

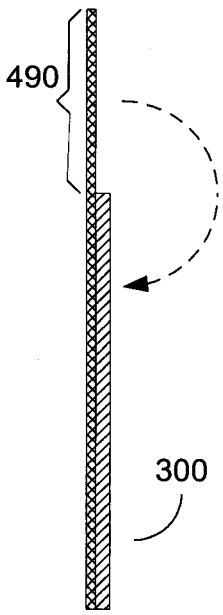

FIGURE 5B

600

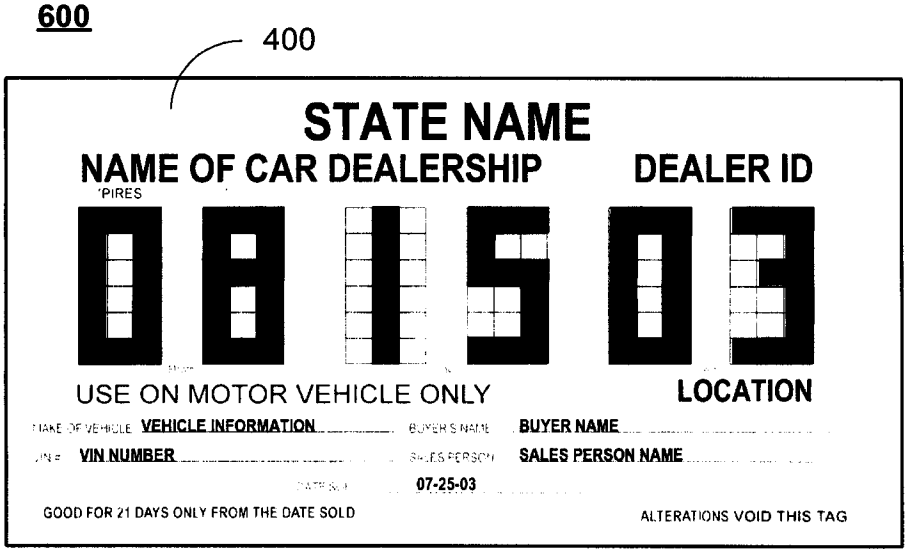

FIGURE 6A

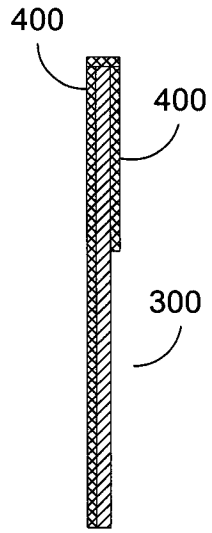

FIGURE 6B